

PRESSURE AIR METER PART LIST

PART # DESCRIPTION

01	Pressure Chamber
02	Pressure Chamber Cap
03	Pressure Chamber Elbow
04	Pressure Chamber Gasket (bottom) (top)
05	Pressure Chamber Bleeder Stem
06	Air Bleeder Cap with Gasket
07	Gauge
11	Needle Valve Stem
12	Needle Valve Nut
13	Needle Valve Lever
14	Needle Valve Spacer
15	Needle Valve O Ring
16	Needle Valve Spring
17	Valve Spring Retainer Nut
18A	Valve Seat O Ring
18	Valve Seat Assembly (complete)
19	Cover
20	Cover O Ring
21	Cover Petcock
22W	Clamp with Stud (Stainless)
23W	Clamp Nut
24W	Clamp Trunion
25W	Clamp Spring
26W	Clamp Toggle
27W	Clamp Toggle Set Screw
28W	Clamp Toggle Lock Nut
22	Clamp Complete (specify model)
23	Clamp Tab & Stud
29	Base with Molded Handles
31	Calibrated Vessel
32	Calibration Outside Tube
33	Calibration Inside Tube
36	Syringe
37	Gauge Safety Glass (specify diameter)
38P	Molded Plastic Carrying Case
57	Gasket Kit without #20
60	Ultra Pump
61	Check Valve with Gasket
62	Pump O Ring Kit (specify model)

